




Spray Stone System




Reference Guide




White Birch

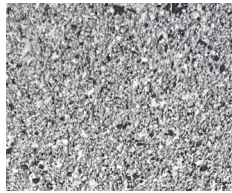


Gray Poplar

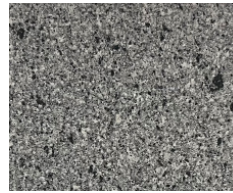

Shagbark Hickory

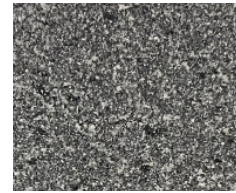


Ash

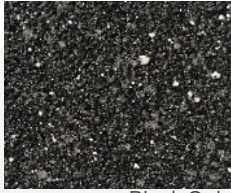

Black Oak



Teak

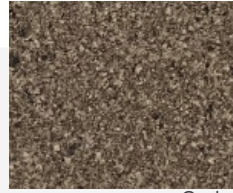


Cedar



Walnut



Cherrywood

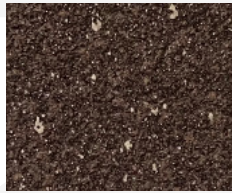

Mahogany

Equipment Suggestions

1. An air compressor with continuous air delivery at 40-80 psi is recommended.
2. Hopper gun pressure control is recommended.
3. 3/8 to 1/2 inch roller

Blend (45 lb bag)	Step 1: (100%)	Step 2: (65% - 75%)	Step 3: (65% - 75%)	Step 4: (15% - 25%)	Step 5: (15% - 25%)
White Birch	White	Light Gray	White	Medium Gray	White
Gray Poplar	White	Medium Gray	White	Dark Gray	White
Shagbark Hickory	White	Dark Gray	Dark Gray	Black	White
Ash	Dark Gray	White	Dark Gray	Black	White
Black Oak	Black	Dark Gray	Black	White	Black
Teak	White	Tan	Light Tan	Medium Gray	Tan
Cedar	Tan	Beige	Tan	Dark Brown	Light Tan
Walnut	Dark Brown	Beige	Adobe	Light Tan	Dark Brown
Cherrywood	Adobe	Dark Brown	Adobe	Light Tan	Dark Brown
Mahogany	Dark Brown	Brown	Dark Brown	Light Tan	Dark Brown
Coverage per step	~350 - 400 sq/ft	~450 - 500 sq/ft	~450 - 500 sq/ft	~750 - 800 sq/ft	~750 - 800 sq/ft